


Car OBD2 Gauge - F8

Introduction

Car OBD2 Gauge, which can display the car driving speed, driving direction, clock, mileage, trip time etc, and keep the driver eyes always on road to avoid the dangerous of lowering down head to read the dashboard.

Key functions

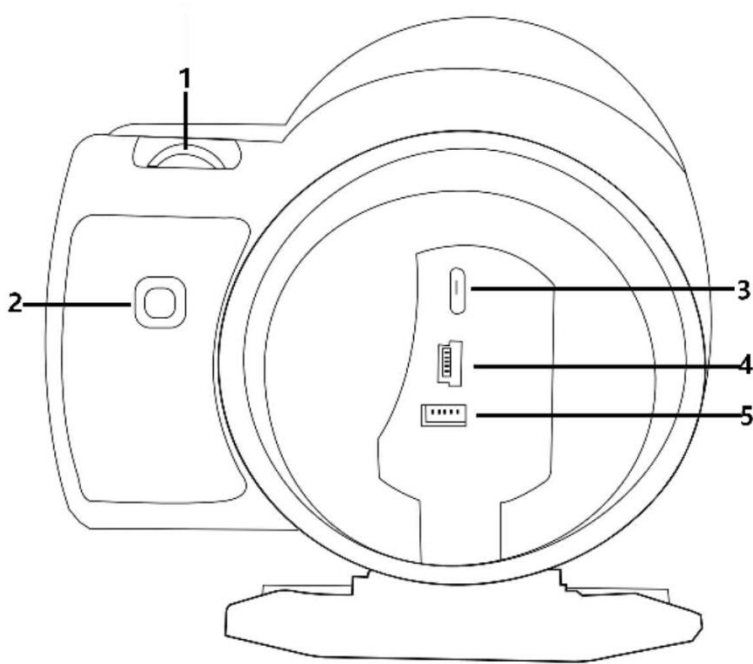

1 Setting button/wave button: can pull it left, pull right, short press in, long press in


2 Light sensor

3 USB upgrade port

4 OBD port (connects the car with OBD2 cable)

5 Reserved port (no function)

Setting button/wave button functions

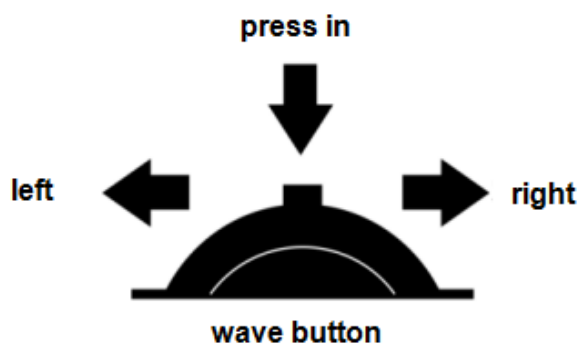

1 Short press in (quick press in the button and release within 1 second):

- (1) to switch the display mode
- (2) to choose menu after entering the setup menu

2 Long press in (press in the button more than 2 seconds and release):

- (1) to enter the setting menu
- (2) to save and exit after setting

3 Pull left:

- (1) to switch the functions in the left area
- (2) to change the setting options

4 Pull right:

- (1) to switch the functions in the right area

(2) to change the setting options

Return
Settings
OBD diagnose
Driving test



Below are the functions abbreviations :

ECT - Engine Coolant Temperature	VLT - Voltage	FUE - Fuel Consumption
RPM - Revolutions Per Minute	TIM - Clock	MIN-Driving time
DIS - Driving Distance	MAP - Intake Pressure	OIT - Oil Temperature
A/F - Air-fuel Ratio	TCP - Turbine Pressure	PSI - Intake pressure

Setting Mode(Menu mode)

Long press in to enter into the setting mode,pull right to choose the menu,and short press in to confirm.Once finishing the setting,long press in to exit.

Settings	Return	CWT Unit
OBD diagnose	Language Set	Speed Unit
Driving test	Sound Switch	Sum Distance
Data Stream	Speed Alarm	Power Off Time
	Coolant Alarm	Sleep Voltage
	RPM Alarm	Time Adjust
	BAT Alarm	Factory Set
	Speed Adjust	
	Speed Offset	
	BAT Adjust	
	Engine Size	
	Fuel Adjust	
	Change Color1	
	Change Color2	
	CHange Color3	
	Brightness	

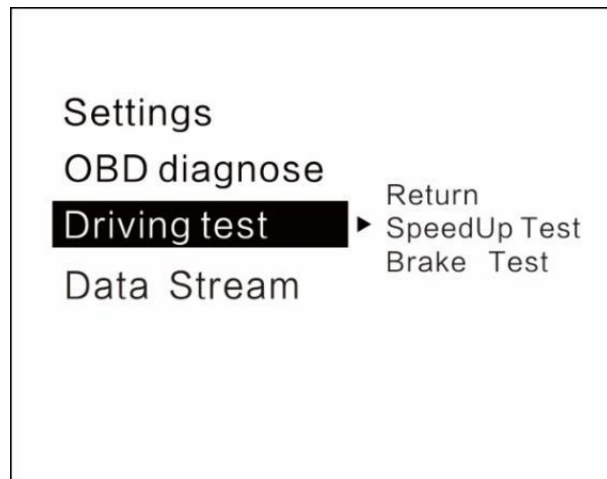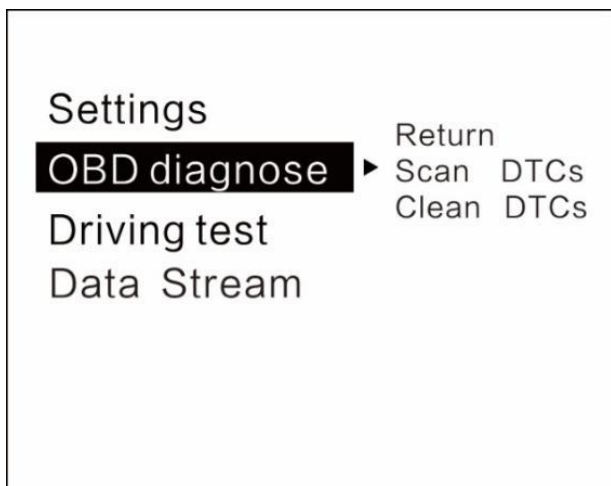

Language Set: Please choose your familiar language (EN-English / CN-Simplified Chinese/ TW-Traditional Chinese)

Sound Switch: turn on/off the buzzer

Speed Alarm: the default value is 150 (the default value can be changed,pull down is to decrease,pull up is to increase, adjust range is 5-200km/h)

Coolant alarm: default value is 120°, it means this device will give alarm when Coolant temperature is over 120°(adjust range is 50-200)

RPM alarm: default value is 6000 r, it means this device will give alarm when RPM over 6000 r(adjust range is 1000-8000)

BAT Alarm: default value is 10.5V, it means this device will give alarm when battery voltage is lower than 10.5V(adjust range is 10.0-15.0V)

Speed Adjust: adjust the speed according to the dashboard,default value is 107%(if the speed is different with the dashboard,then can adjust the value. For example, if the dashboard speed is 100Km/h, and the device speed is 105KM/h, then please adjust the value to 102)

Speed Offset: When the vehicle turns off,but the device speed is not 0, then adjust the device Speed Offset value (if the device speed shows 5KM/H, then change the device Speed Offset default value at 5)

BAT Adjust:if the battery voltage is different with the vehicle,it can be adjusted.

(if the device voltage is 0.2V higher than the dashboard's,please change the value to 98%)

Engine Size: if the fuel consumption is much different with the dashboard,please change it as the Displacement size(for example, if the vehicle displacement is 3.6L, please change the default value to 3.6L)

Fuel adjust: default value is 100%,it can be adjusted when the fuel consumption is different with the dashboard. (for example, if the device fuel consumption is 0.2L higher than the dashboard, please adjust it to 98%)

Change Color 1: the speed color in the main display interface(8 different colors)

Change Color 2:the left side functions color on the screen(8 different colors)

Change Color 3:the right side functions color on the screen(8 different colors)

Brightness: default 0 (Automatic adjustment),1-8(the brightness will increase as the digital added)

CWT Unit : default coolant temperature is °C,also can be changed to °F

Speed unit: KM/h or MPH can be changed

Sum distance: can make the total driving distance same as dashboard(if the dashboard shows the sum distance is 30010Km,the user can make the device value at 30010KM)

Power off time: default power off time is 10s,for Auto start and stop cars,please make the power off time to 180-240s

Sleep Voltage: default is off ,if the device can't auto off,please adjust the voltage at 13.2V or higher

Time adjust : default time is GMT+8(China time), can change the it to local time,pull left to set the

hour,pull right to set the minutes. (It without the battery,so it needs to set the time once the device powered off)

Factory set: short press in to do the factory set

Driving test

Speedup test: show the speed,distance,driving 400m takes time,driving 100m takes time

Brake Test: Brake when the speed is over 60 KM/H, then it show brake distance and time

Error code set

Scan DTCs:scan the ECU to check if there is the error code,and show the error details

Clean DTCs:switch to Clean the DTCs,short press in the button to finish the cleaning

Data Stream

Show all the vehicle data stream

Please note

It is recommended to unplug the device if your car doesn't been used for more than one week.

Troubleshooting

1.The screen without any display,and no power

Start the car engine;check if the OBD cable line is tight;please pull down the OBD cables more times to ensure;check if product power switch turns on. If still no display ,please change another car to test, analyze whether the car OBD diagnostic interface is good, if it is not good,please repair it and try again.

2.Only shows the car voltage and be automatic power off after 30 second when the device is with power

This product just available for cars with OBD2 agreement and EU-OBD agreement(European region: after 03 years, Other region:after 07 years)

This Products do not support JOBD and OBDI and recommended test for another car.

3.Inaccurate Speed

a.First check the speed unit is correct or not, the speed unit including KM/H and MPH,please refer to the setting to switch the unit.

b.When the product is power on,long press in the button to enter into the menu option,pull right the button to choose the speed adjust,short press in the button to set the value,pull left or right to change the value.(if the dashboard shows 100,and the device shows the 105,change the default value at 102)

4.Inaccurate Fuel consumption

Check your car displacement,and set the device same as your car(if your car is 2.0L,then change the device value at 2.0L).The fuel consumption can be adjusted,but we don't suggest to change it ,because all the datas are read from the car ECU directly.

5.The device can not auto power off

Adjust the sleep voltage to 13.2V or 13.6V, then HUD will power off in 3 minutes.

6.Auto start- stop cars

Change the Power off time to 180s or 300s

7.HUD crashes in driving,or Hybrid car

Change the power off time to 180 or 300. If still can't solve,please switch to GPS system.

8.Wrong operation lead to crashes

(1) Please check the OBD interface if connected with the other device

(2) Modified and retrofitted cars will cause a crash

Please remove other OBD devices and do the factory reset.

9.Inaccurate Time

Long press in the button to enter into the menu setting, pull right to find the time adjust, short press in to choose the option, pull left to set the hour, pull right to set the minutes. After finished the setting, long press in to save and exit. (It is without the battery, so it needs to set the time once the device powered off)